


森南第三地区 基準点網図

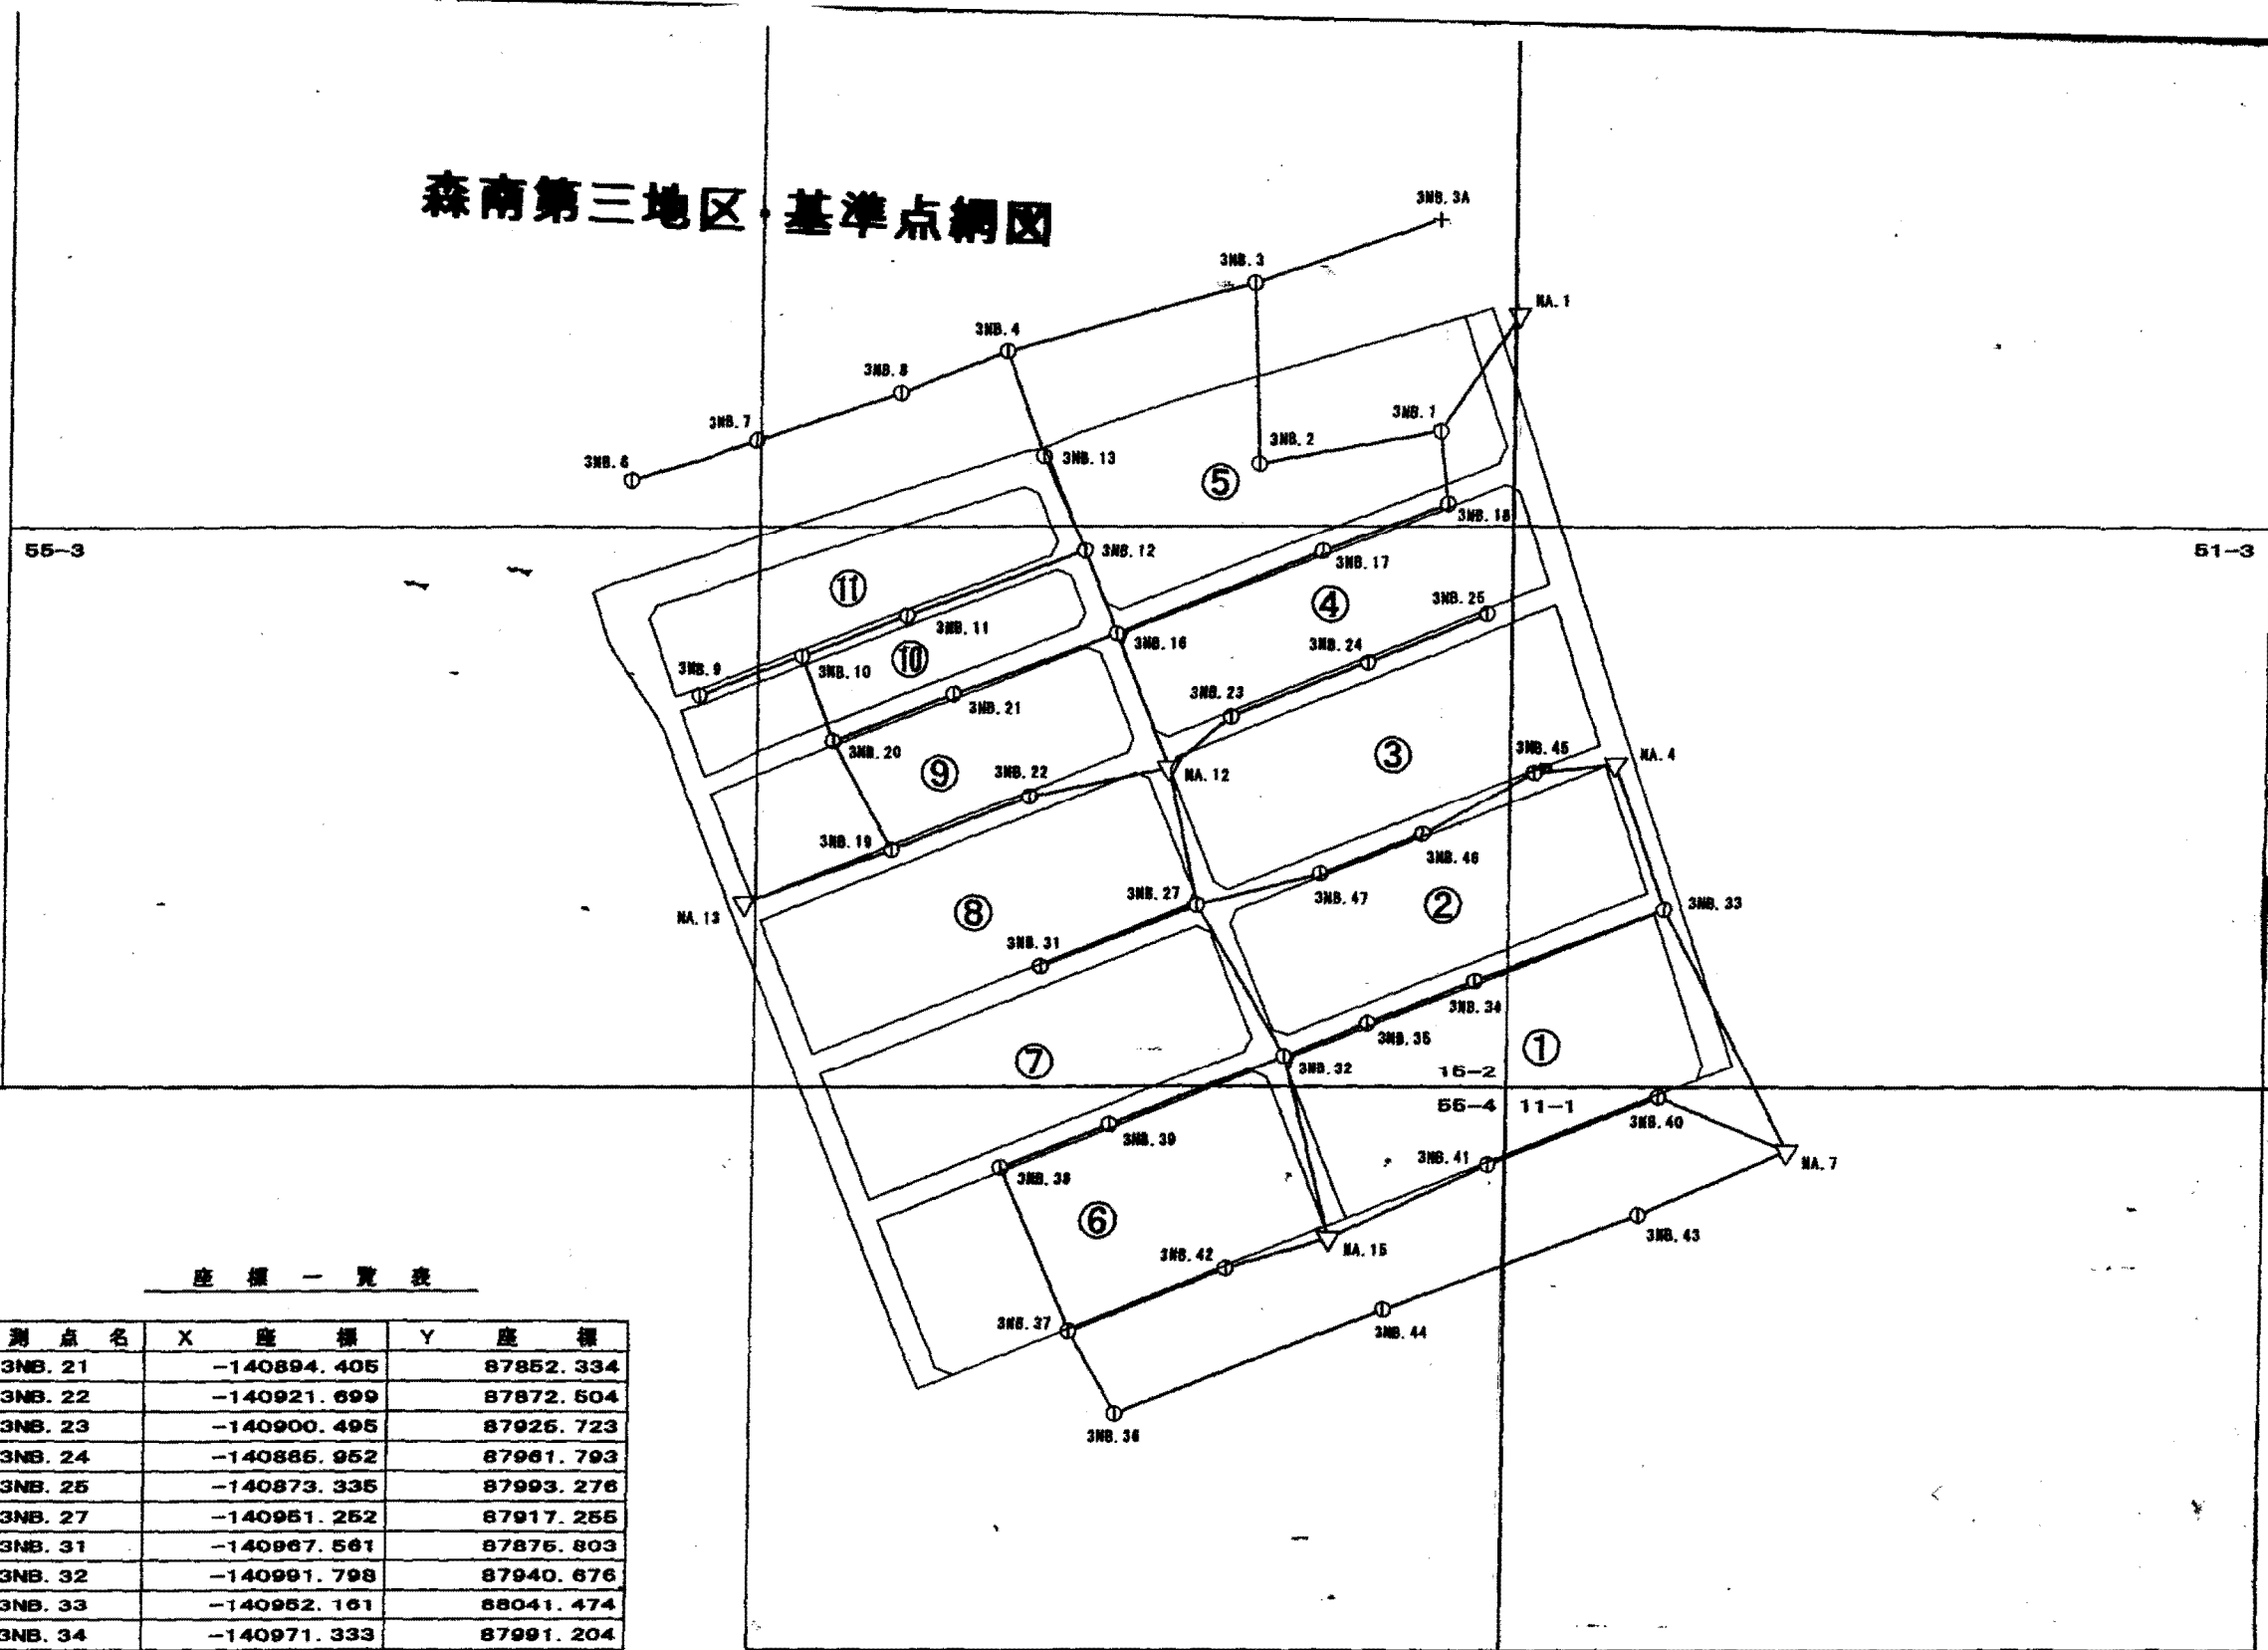

Z5

U6

座標一覧表

測点名	X 座標	Y 座標
NA. 1	-140793.719	88001.262
NA. 4	-140912.730	88028.077
NA. 7	-141017.029	88074.218
NA. 12	-140914.210	87909.417
NA. 13	-140950.597	87796.924
NA. 15	-141040.194	87952.883
3NB. 1	-140824.840	87980.340
3NB. 2	-140833.428	87932.447
3NB. 3	-140785.554	87930.855
3NB. 3A	-140768.124	87979.664
3NB. 4	-140803.248	87865.419
3NB. 6	-140837.519	87764.642
3NB. 7	-140827.054	87798.823
3NB. 8	-140814.542	87837.446
3NB. 9	-140894.422	87783.735
3NB. 10	-140884.464	87811.849
3NB. 11	-140873.858	87839.811
3NB. 12	-140856.590	87886.527
3NB. 13	-140831.302	87875.324
3NB. 16	-140878.584	87895.189
3NB. 17	-140856.803	87949.328
3NB. 18	-140843.986	87982.483
3NB. 19	-140936.213	87836.325
3NB. 20	-140906.918	87820.408

座標一覧表

測点名	X 座標	Y 座標
3NB. 21	-140894.405	87852.334
3NB. 22	-140921.699	87872.504
3NB. 23	-140900.495	87925.723
3NB. 24	-140885.952	87961.793
3NB. 25	-140873.335	87993.276
3NB. 27	-140951.252	87917.255
3NB. 31	-140967.561	87875.803
3NB. 32	-140991.798	87940.676
3NB. 33	-140952.161	88041.474
3NB. 34	-140971.333	87991.204
3NB. 35	-140982.703	87962.645
3NB. 36	-141086.769	87896.975
3NB. 37	-141064.867	87884.549
3NB. 38	-141021.500	87865.981
3NB. 39	-141010.050	87894.701
3NB. 40	-141002.609	88040.464
3NB. 41	-141020.633	87995.231
3NB. 42	-141048.177	87926.010
3NB. 43	-141033.952	88035.458
3NB. 44	-141059.022	87967.691
3NB. 45	-140915.204	88006.534
3NB. 46	-140932.028	87976.734
3NB. 47	-140942.924	87949.778

取扱注意

この資料は、土地区画整理事業に伴う換地処分時の測量成果（日本測地系）ですので、あくまで参考資料として取り扱ってください。